

Cat. No. 60-1190

## Rockin' Santa

The jolly Rockin' Santa sings and dances to add cheer to the Christmas season.

Turn Santa on and he sings a happy Christmas tune while he dances to the music — in sync with the beat! He sings non-stop, every five minutes, or whenever a person passes by.

## INSTALLING BATTERIES

 
You need four C batteries (not supplied) to power the Rockin' Santa. We recommend RadioShack alkaline batteries.

### Cautions:

- Use only fresh batteries of the required size and recommended type.
- Do not mix old and new batteries, different types of batteries (standard, alkaline, or rechargeable), or rechargeable batteries of different capacities.


Follow these steps to install batteries.

1. Use a Philips screwdriver to loosen the screw in the battery compartment cover, then lift up the cover.
2. Put the batteries in the compartment as indicated by the polarity symbols (+ and -) marked inside.

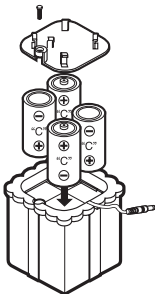

3. Replace the cover and tighten the screw.

 4. Insert the power plug from Santa's Christmas present into the DC jack at the back of the Rockin' Santa's left shoe.

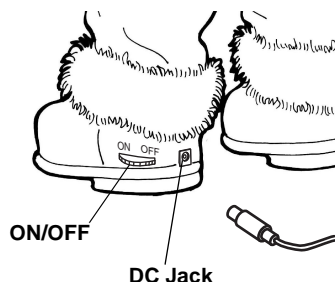

If the Rockin' Santa does not work properly, replace the batteries.

**Warning:** Dispose of old batteries promptly and properly. Do not burn or bury them.

**Caution:** If you do not plan to play the Rockin' Santa for several weeks, remove the batteries. Batteries can leak chemicals that can destroy electronic parts.

## ROCKIN' WITH SANTA

1. Place the Rockin' Santa with its feet firmly on a flat surface.
2. Slide the Rockin' Santa's 2/1/0 switch to have him sing and dance in one of these three ways:

 
**Motion Activated Play (2)** — whenever a person passes in front of him

**Continuous Play (1)** — continuously

© 1999 Tandy Corporation.  
All Rights Reserved.

RadioShack is a registered trademark used by Tandy Corporation.

### Intermittent Play (0) — every five minutes

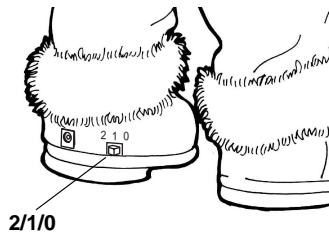

3. Rotate **ON/OFF** clockwise until it clicks to turn the Rockin' Santa on, then adjust the volume to the desired level.

The Rockin' Santa sings and dances merrily for about four minutes.

4. To stop the Rockin' Santa singing at any time, rotate **ON/OFF** counterclockwise until it clicks.

### CARE

To enjoy your Rockin' Santa for a long time:

- Keep the Rockin' Santa dry. If it gets wet, wipe it dry immediately.
- Use and store the Rockin' Santa only in normal temperature environments.
- Handle the Rockin' Santa gently and carefully. Don't drop it.
- Keep the Rockin' Santa away from dust and dirt.
- Wipe the Rockin' Santa with a damp cloth occasionally to keep it looking new.

Modifying or tampering with the Rockin' Santa's internal components can cause a malfunction and invalidate its warranty. If your Rockin' Santa is not performing as it should, take it to your local RadioShack store for assistance.

#### Limited Ninety-Day Warranty

This product is warranted by RadioShack against manufacturing defects in material and workmanship under normal use for ninety (90) days from the date of purchase from RadioShack company-owned stores and authorized RadioShack franchisees and dealers. EXCEPT AS PROVIDED HEREIN, RadioShack MAKES NO EXPRESS WARRANTIES AND ANY IMPLIED WARRANTIES, INCLUDING THOSE OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE, ARE LIMITED IN DURATION TO THE DURATION OF THE WRITTEN LIMITED WARRANTIES CONTAINED HEREIN. EXCEPT AS PROVIDED HEREIN, RadioShack SHALL HAVE NO LIABILITY OR RESPONSIBILITY TO CUSTOMER OR ANY OTHER PERSON OR ENTITY WITH RESPECT TO ANY LIABILITY, LOSS OR DAMAGE CAUSED DIRECTLY OR INDIRECTLY BY USE OR PERFORMANCE OF THE PRODUCT OR ARISING OUT OF ANY BREACH OF THIS WARRANTY, INCLUDING, BUT NOT LIMITED TO, ANY DAMAGES RESULTING FROM INCONVENIENCE, LOSS OF TIME, DATA, PROPERTY, REVENUE, OR PROFIT OR ANY INDIRECT, SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES, EVEN IF RadioShack HAS BEEN ADVISED OF THE POSSIBILITY OF SUCH DAMAGES.

Some states do not allow the limitations on how long an implied warranty lasts or the exclusion of incidental or consequential damages, so the above limitations or exclusions may not apply to you.

In the event of a product defect during the warranty period, take the product and the RadioShack sales receipt as proof of purchase date to any RadioShack store. RadioShack will, at its option, unless otherwise provided by law: (a) correct the defect by product repair without charge for parts and labor; (b) replace the product with one of the same or similar design; or (c) refund the purchase price. All replaced parts and products, and products on which a refund is made, become the property of RadioShack. New or reconditioned parts and products may be used in the performance of warranty service. Repaired or replaced parts and products are warranted for the remainder of the original warranty period. You will be charged for repair or replacement of the product made after the expiration of the warranty period.

This warranty does not cover: (a) damage or failure caused by or attributable to acts of God, abuse, accident, misuse, improper or abnormal usage, failure to follow instructions, improper installation or maintenance, alteration, lightning or other incidence of excess voltage or current; (b) any repairs other than those provided by a RadioShack Authorized Service Facility; (c) consumables such as fuses or batteries; (d) cosmetic damage; (e) transportation, shipping or insurance costs; or (f) costs of product removal, installation, set-up service adjustment or reinstallation.

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state.

RadioShack Customer Relations, 200 Taylor Street, 6th Floor, Fort Worth, TX 76102

*We Service What We Sell*

04/99

**RadioShack**  
A Division of Tandy Corporation  
Fort Worth, Texas 76102

07A99

Printed in Hong Kong